



6 kW - HEIDI- LILLI CLEANING

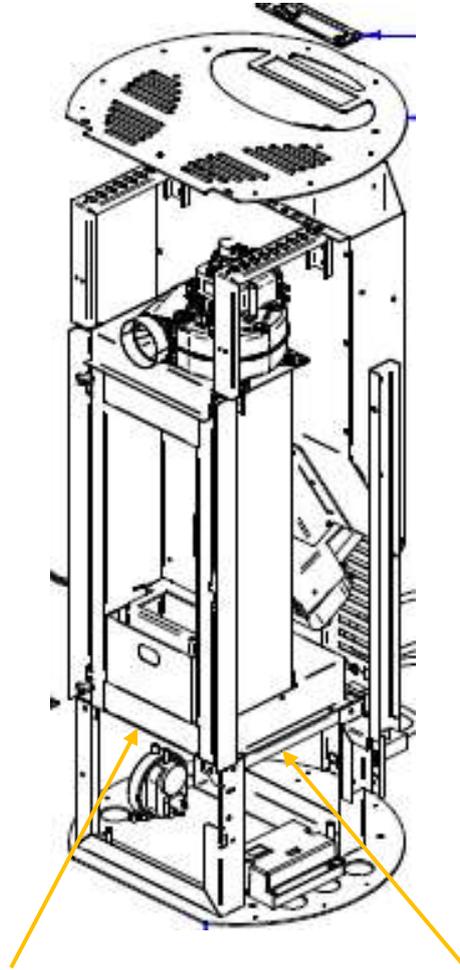


FOR THE CLEANING OF THE STOVE'S FURNACE IN THE FIRST SERIES, THE BOTTOM OF THE STOVE (WHERE THE FUME EXTRACTOR ENGINE IS FIXED) MUST BE DISASSEMBLED BY UNSCREWING THE VARIOUS SCREWS THAT ARE FIXING IT.

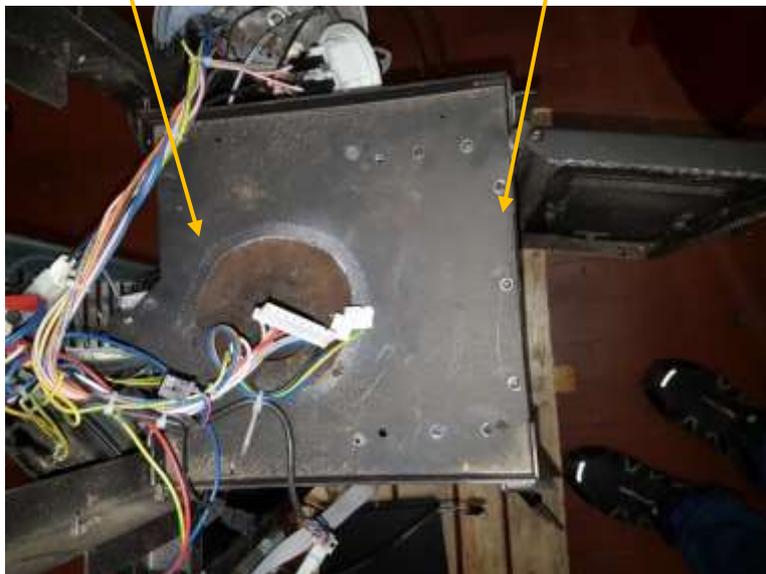



ONCE THE BOTTOM WILL BE REMOVED,
YOU CAN EASILY CLEAN ALL THE SMOKES' RIDE.

SMOKES
DESCENT'S
CHANNELS

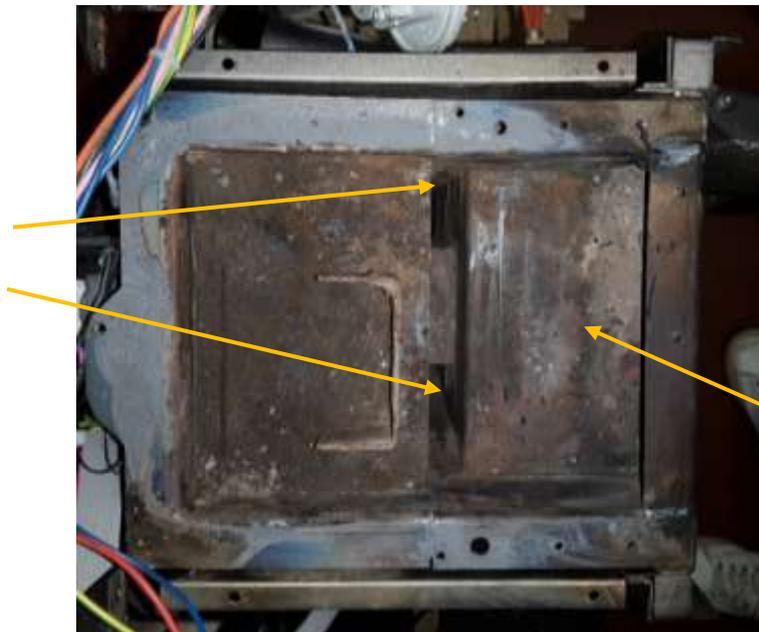

COMBUSTION
CHAMBER'S
BOTTOM